



 1300 360 127

**SUPPLY
DELIVERY AND INSTALLATION
SERVICE AND REPAIR**

*City Safes has all of your security
requirements covered*

SecuRam BASIC

Operating and Changing Instructions

CITYSAFES FACTORY DEFAULT CODE IS 123456



TO OPEN

1. Enter valid six (6) digit code. If opening for the first time, factory default code is 123456. Each number is accompanied by a BEEP.
2. 2 BEEPS at the end of code entry indicates code is accepted. Turn safe handle to open safe.
3. 3 BEEPS at the end of code entry indicates wrong code has been entered. Check code and re-enter.

TO LOCK

1. Close safe door and turn handle to close position. The lock will lock automatically.

TO CHANGE CODE

Always perform operation with door open.

1. Enter "Zero" six times.
2. Enter your existing six (6) digit code once. If on factory setting enter 123456.
3. Enter your NEW six (6) digit code twice (eg: **473265473265**)
4. 2 BEEPS indicates code is accepted.
5. Test new code several times before closing the door.
6. VALID CODE ENTRY - 2 BEEPS at the end of code entry indicates code is accepted.
7. INVALID CODE ENTRY - 3 BEEPS at the end of code entry indicates wrong code has been entered. Old code is still valid.

SHOWROOM AND HEAD OFFICE

24 Garema Ct,
Kingsgrove, NSW 2208

Ph: (02) 9502 1014

Email: sales@citysafes.com.au

Web: www.citysafes.com.au



 1300 360 127

**SUPPLY
DELIVERY AND INSTALLATION
SERVICE AND REPAIR**

*City Safes has all of your security
requirements covered*

WRONG TRY PENALTY

- Entry of four (4) consecutive invalid codes starts a 5 minute delay period in which the lock is inoperable.
- A red light flashing intermittently on the input pad indicates this.
- At the end of the delay period, the lock is ready for the correct code entry.
- An additional invalid code will start the 5 minute delay period again.

REPLACING THE BATTERY



LOW BATTERY WARNING

- Repeated beeping during opening indicates that the battery is low and needs replacing.

CHANGING THE BATTERY

- Note: Only use 9V Duracell Alkaline batteries.

Steps to change battery

1. Pull the TAB at the base of the keypad towards you to release the battery.
2. Remove battery and replace with a new 9 volt Duracell Alkaline battery.
3. Reinsert the battery pod and ensure it is firmly in place.
4. CAUTION: Fitting of an incorrect battery type or battery with low life span (limited use by date) may result in intermittent operational problems.

SHOWROOM AND HEAD OFFICE

24 Garema Ct,
Kingsgrove, NSW 2208

Ph: (02) 9502 1014

Email: sales@citysafes.com.au

Web: www.citysafes.com.au